



## Standard Test Method for Determination of Pitch Volatility<sup>1</sup>

This standard is issued under the fixed designation D 4893; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last approval. A superscript epsilon ( $\epsilon$ ) indicates an editorial change since the last revision or reapproval.

### 1. Scope

1.1 This test method covers the determination of the percent of pitch volatility.

1.2 Since this test method is empirical, strict adherence of the procedure is necessary.

1.3 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.*

### 2. Summary of Test Method

2.1 An aluminum weighing dish with about 15 g of specimen is introduced into the cavity of a metal block heated and maintained at 350°C (662°F). After 30 min  $\pm$  10 s during which the volatiles are swept away from the surface of the liquid pitch by preheated nitrogen, the sample is taken out and allowed to cool down in the desiccator. The pitch volatility is determined by the sample weight loss and reported as percent weight loss.

### 3. Significance and Use

3.1 This test is useful in evaluating and characterizing pitch physical properties in comparing the consistency of shipments and sources of supply.

### 4. Apparatus

4.1 *Aluminum Block*,<sup>2</sup> 4½-in. outside diameter, composed of two sections (Figs. 1-4).

4.1.1 The top block is maintained at a chosen constant temperature according to the signal from the thermocouple inserted into the thermowell #1 near the center of the block. A proportional temperature controller regulates the heat input.

Two insulated handles are attached to this part for easy handling. An additional thermowell #2, located in the center of the block, accommodates another thermocouple used only for the determination of the rate of temperature rise of the pitch. When the screw at the bottom of the #2 well is taken out, the thermocouple can then be pushed down and inserted in pitch.

4.1.2 The bottom block has a cavity for the aluminum weighing dish. A spiral channel cut around the periphery of this part serves for preheating the nitrogen introduced at the measured rate (10 cm<sup>3</sup>/min) into the block for purging volatiles.

4.1.3 The test temperature, the same as that in the top block, is maintained by the second proportional temperature controller according to the signals of a thermocouple inserted in a thermowell #3 of the bottom block. There is a hole in the center of the bottom cylinder to accommodate the sample platform, a rod with a stainless steel disk welded to its top. The aluminum sample dish containing the sample rests on top of this disk during the test. The aluminum sample dish can be lifted out of the cavity by raising the disk up to the upper rim of the cavity.

4.2 *Aluminum Weighing Dish*.<sup>3</sup>

4.3 *Flowmeter*, 0 to 25-cm<sup>3</sup>/min range.

4.4 *Nitrogen Cylinder*, equipped with a pressure regulator.

4.5 *Timer*, with an alarm.

4.6 *Aluminum Plate*, 5-by-5-in., approximately 20-gage.

### 5. Dehydration of Sample

5.1 *Hard Pitch*—If the solid bulk sample contains free water, air-dry a representative portion in a forced-draft oven at 50°C (122°F).

5.2 *Soft Pitch (Softening Point <60°C (<140°F))*—If the presence of water is indicated by surface foam on heating, maintain a representative portion of the bulk sample at a temperature between 125 and 150°C (251 and 302°F) in an open container until the surface is free of foam. Take care not to overheat, and remove heat source immediately when foam subsides.

<sup>1</sup>This test method is under the jurisdiction of ASTM Committee D-2 on Petroleum Products and Lubricants and is the direct responsibility of Subcommittee D02.05.OF on Industrial Pitches.

Current edition approved Nov. 15, 1994. Published January 1995. Originally published as D 4893 – 89. Last previous edition D 4893 – 89.

<sup>2</sup>An aluminum block that may be obtained on special order from Koppers Company, Inc., 1005 Wm. Pitt Way, Pittsburgh, PA 15238, has been found satisfactory for this purpose; or drawings of block will be furnished by Koppers upon request.

<sup>3</sup>Fisher Catalog Number 08-732 or VWR Scientific Catalog Number 25433-008 has been found satisfactory for this purpose.

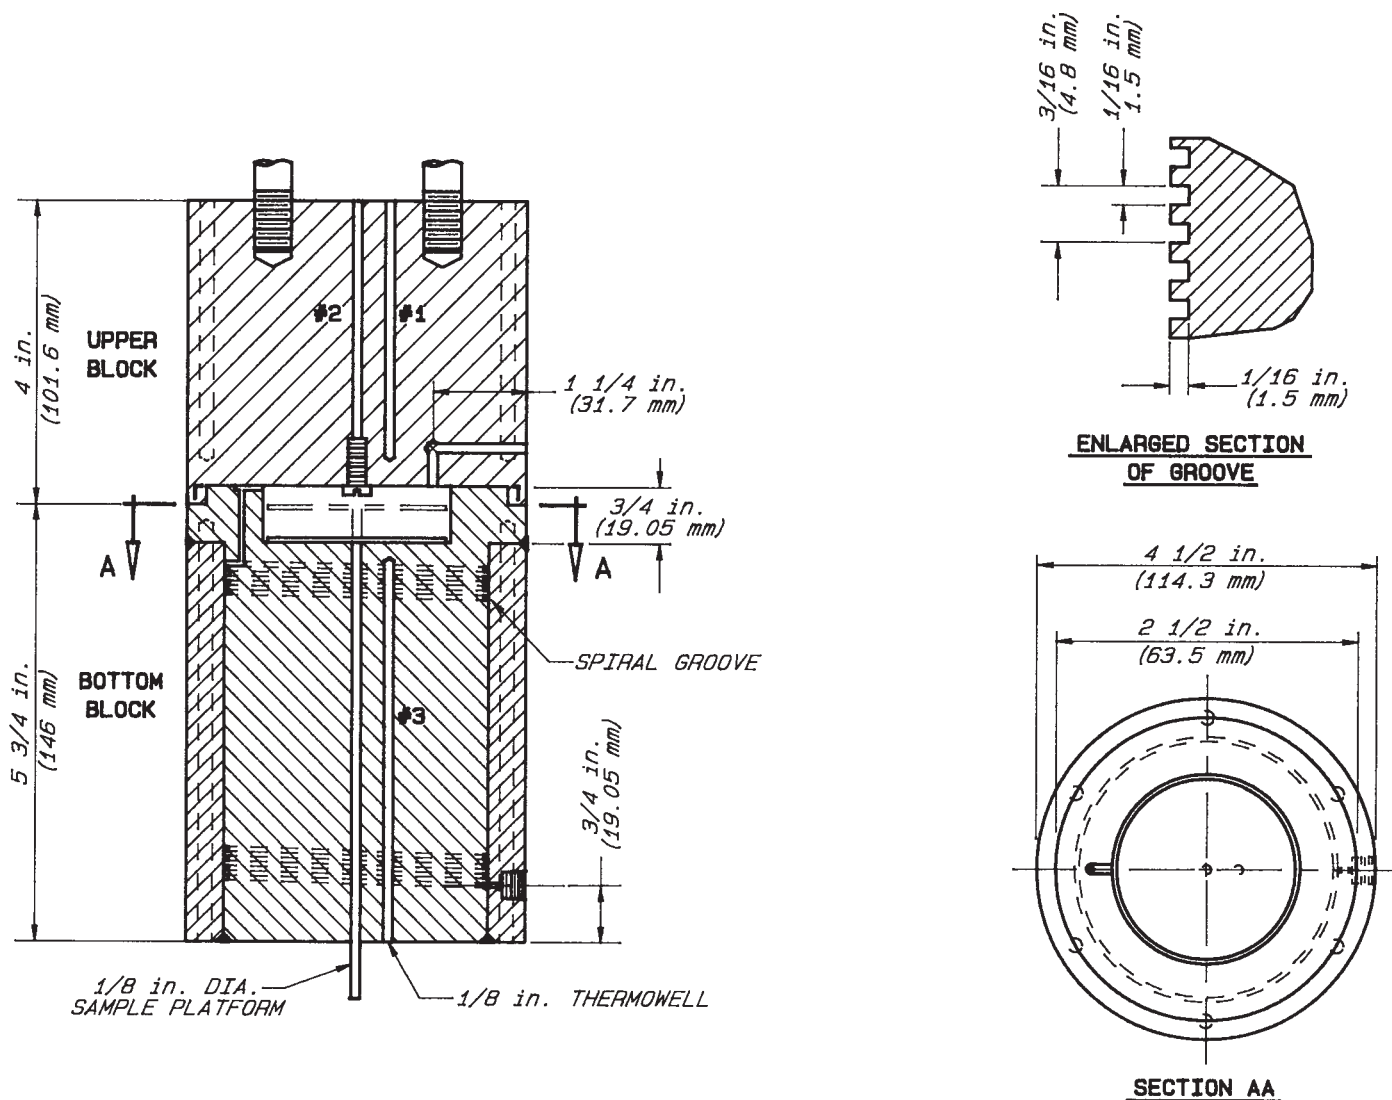


FIG. 1 Schematic of the Volatility Apparatus

**6. Preparation of Working Sample**

6.1 Crush sample to pass No. 4 mesh (4760 μm).

**7. Preparation of Apparatus**

7.1 Assemble the apparatus so that the exit opening in the upper block is aligned with bottom nitrogen inlet fitting of the bottom block. Both top and bottom blocks are heated to the test temperature, 350°C (662°F), using the proportional temperature controllers. Avoid heating the upper block and lower block when separated from each other.

**8. Procedure**

8.1 Weigh 15 g of prepared sample into a tared aluminum weighing dish with precision of 0.1 mg.

8.2 Start nitrogen purge system at a rate 10 cm<sup>3</sup>/min ± 0.1 cm<sup>3</sup>/min (10 mL/min ± 0.1 mL/min).

8.3 Place top block onto bottom block, align the nitrogen inlet with nitrogen outlet, and heat to test temperature of 350°C (662°F).

8.4 Remove top block. Raise the sample platform up slightly above the rim of heating cavity and support with the aluminum plate inserted between the sample platform and top rim of the bottom block. Place the aluminum sample dish containing the sample onto the sample platform. Remove the inserted aluminum plate from below the sample platform and lower the sample carefully into the heated cavity. Close the bottom block with the top block and realign the nitrogen inlet with nitrogen outlet. This operation should be performed as quickly as possible to avoid excessive heat loss from the heated cavity.

8.5 Heat for 30 min ± 10 s. Remove top block, raise sample platform, insert aluminum plate under the sample platform, sweep the sample off the sample platform on to the plate, and set aside.

8.6 Close the bottom block with the top block, realign the nitrogen inlet and outlet and allow the temperature in the blocks to stabilize before inserting subsequent sample.

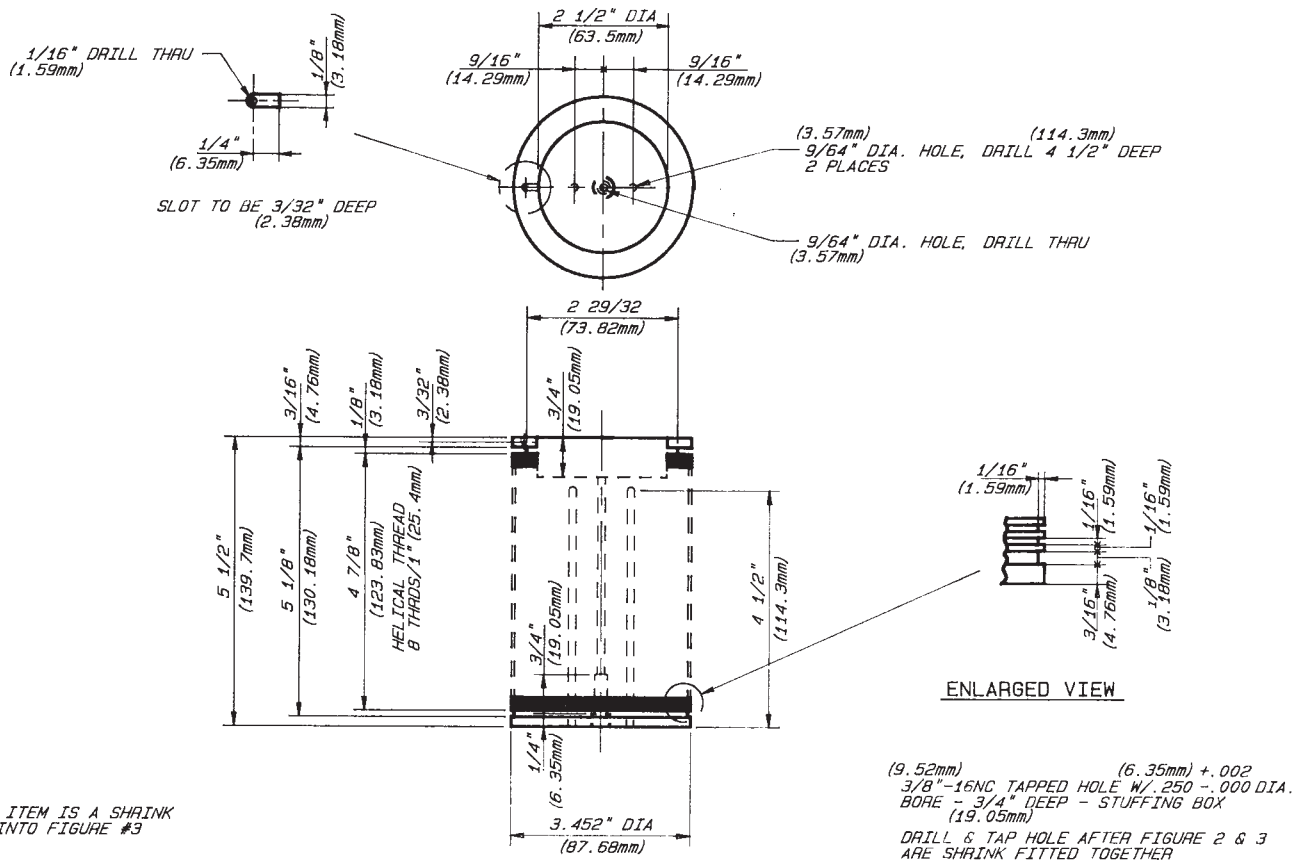


FIG. 2 Internal Schematic Lower Block

8.7 When sample has cooled, approximately 2 min after removal or when crust has formed on top of sample, set aluminum dish containing sample into desiccator for 30 min. Determine weight loss.

8.8 Report in percent, mass loss for test temperature, 350°C.

$$V = (b \times 100)/a \quad (1)$$

where:

$V$  = volatility, %, mass loss,

$b$  = mass loss, g, and

$a$  = net mass of sample, g.

8.9 The exit opening of nitrogen purge, the sample platform, and the seat between the blocks must be kept free of deposits. For cleaning use acetone and a drill bit for opening the nitrogen exit.

## 9. Precision <sup>4</sup>

9.1 *Repeatability*— Duplicate values by the same operator shall not be considered suspect unless they differ by more than 0.2 %.

9.2 *Reproducibility*— The values reported by each of two laboratories representing the arithmetic average of duplicate

determinations shall not be considered suspect unless the values differ by more than 0.3 %.

## 10. Determination of Unit Heat-up Rate

10.1 The volatility test temperature should be maintained at the same level for the total duration of the test. Because this is not possible, the required temperature level should be reached within the shortest time after placing the sample into the preheated blocks. *The heat-up rate is determined with a selected control pitch sample.* The temperature of pitch is measured and recorded with the provided thermocouple and a separate temperature indicator (not provided). For that reason the thermocouple is introduced through the upper block after removing the closing screw and its immersion in the pitch sample is adjusted so that it is covered with pitch but does not touch the bottom of the aluminum weighing dish.

10.2 The procedure for preheating the blocks and introducing the pitch sample into the cavity of the volatility apparatus is identical to the actual volatility procedure.

10.3 The temperature of pitch should level off, that is, the temperature rise should become less than 1°C/min, within the interval not longer than 10 min after the start of the experiment. Plot time versus temperature, taking data every 2 min (Fig. 5).

## 11. Keywords

11.1 coaltar; pitch; volatility

<sup>4</sup> Supporting data is available from ASTM Headquarters. Request RR:D08-1004.


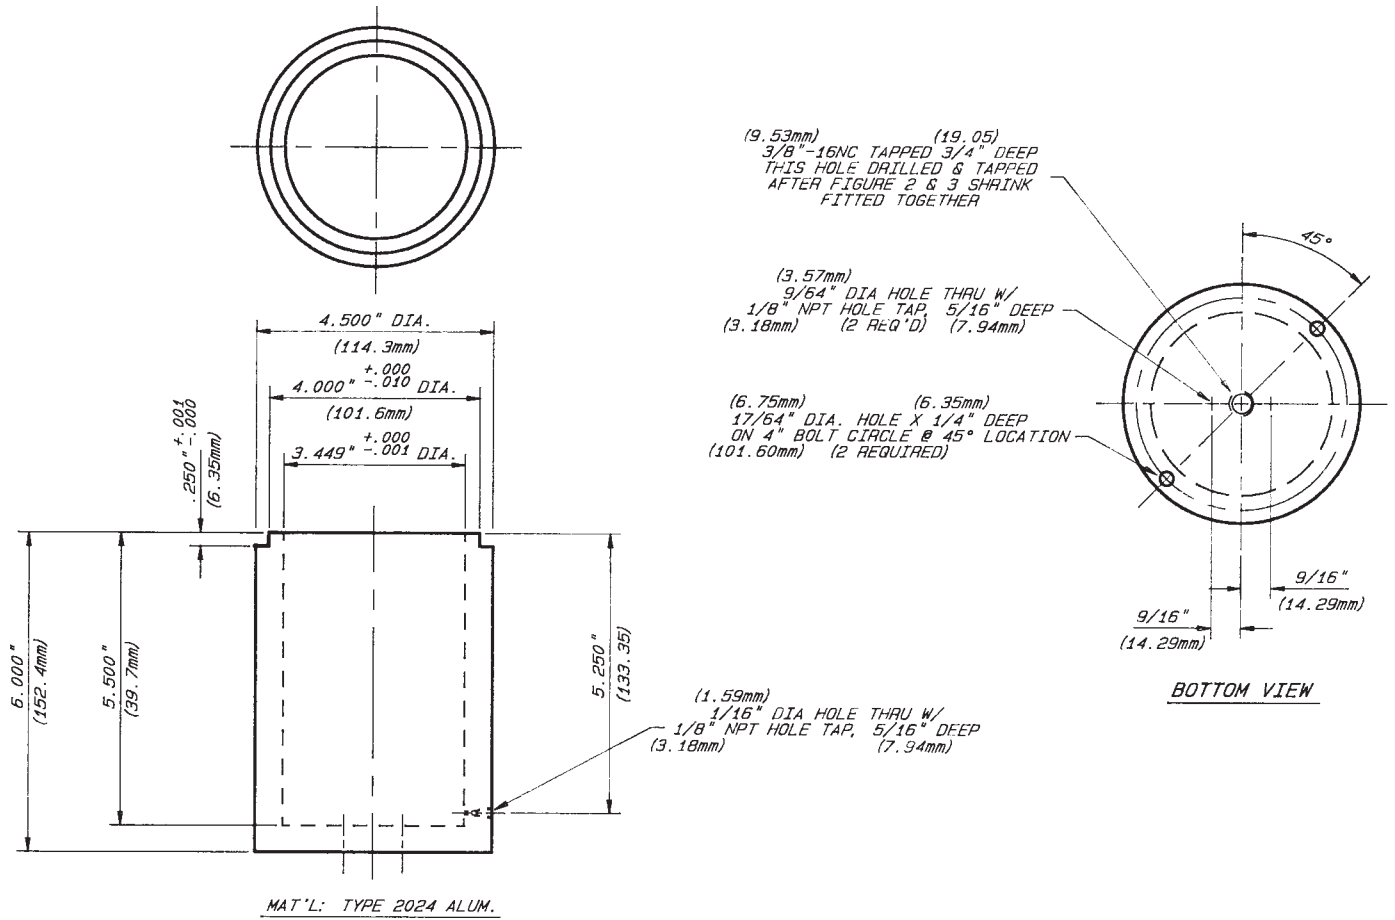


FIG. 3 Schematic External Bottom Block

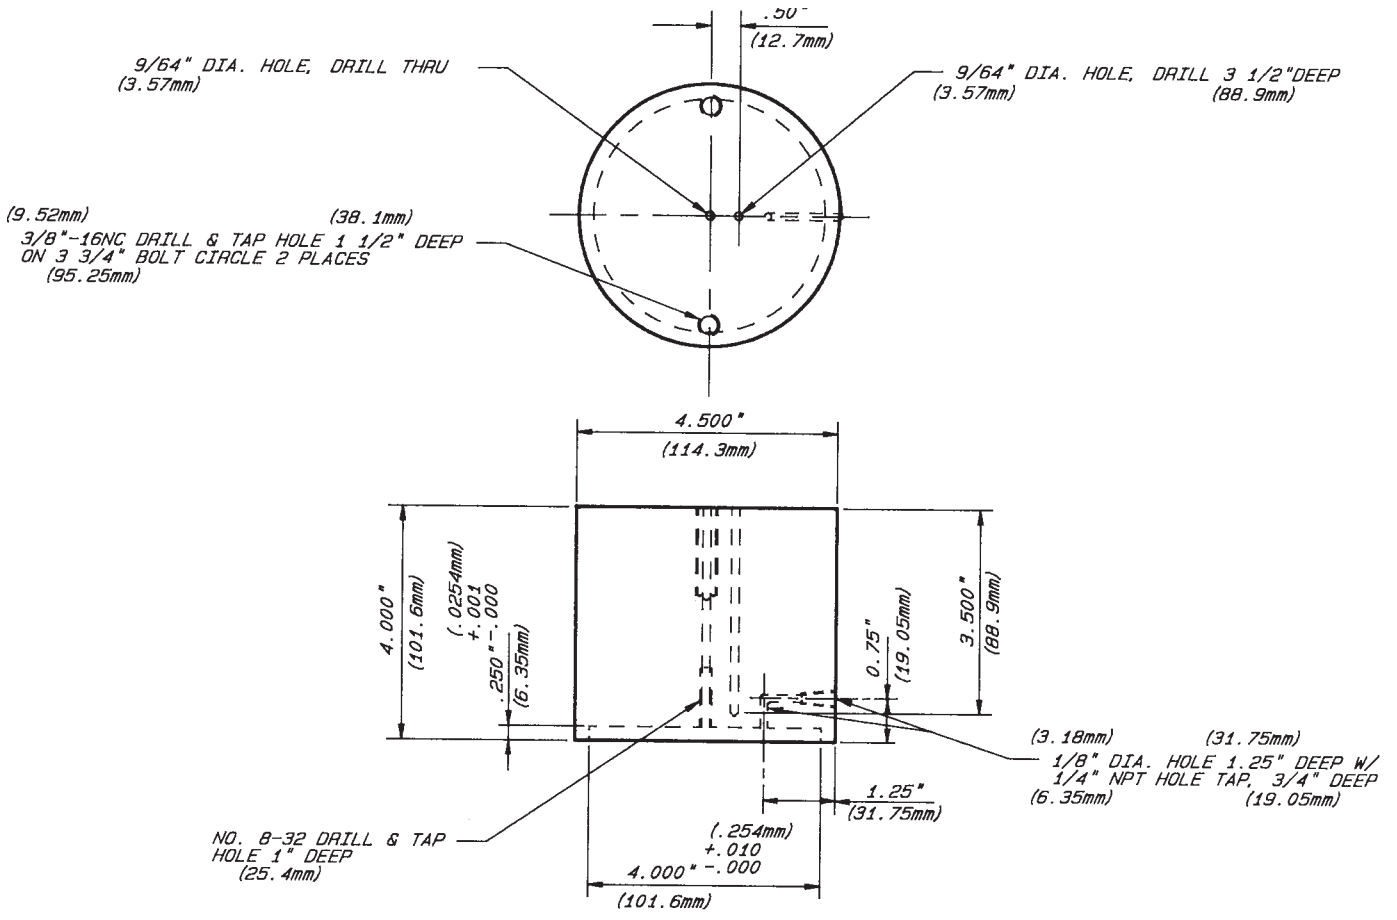

MAT'L: TYPE 2024 ALUM.

FIG. 4 Schematic Top Block

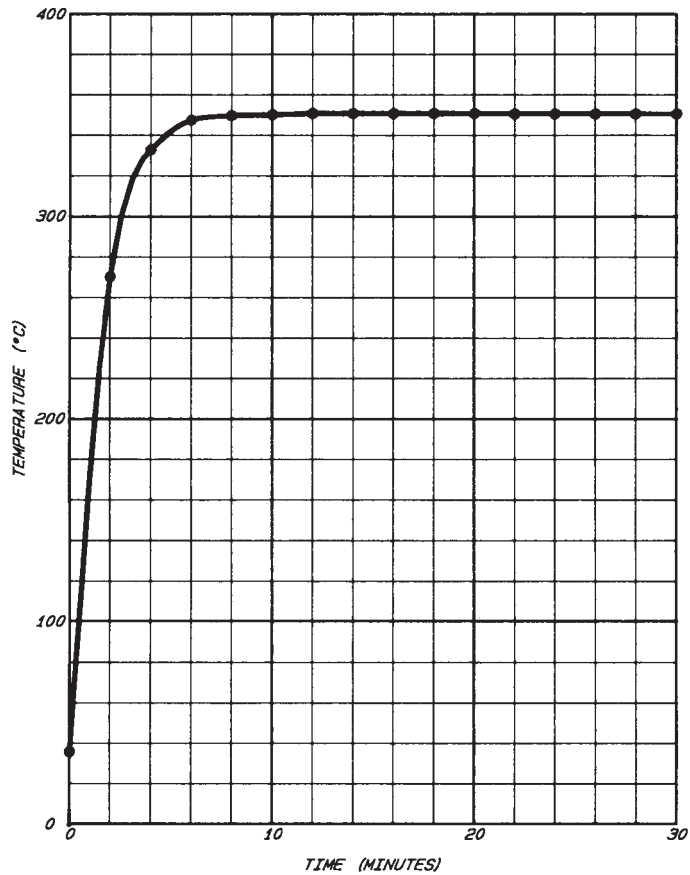


FIG. 5 Temperature Rise Measured in a Calibration Sample

ASTM International takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, at the address shown below.

This standard is copyrighted by ASTM International, 100 Barr Harbor Drive, PO Box C700, West Conshohocken, PA 19428-2959, United States. Individual reprints (single or multiple copies) of this standard may be obtained by contacting ASTM at the above address or at 610-832-9585 (phone), 610-832-9555 (fax), or service@astm.org (e-mail); or through the ASTM website (www.astm.org).